

## SPDIF Input daughter board for USB\_1798DAC User's Guide


This SPDIF Input daughter board Development for USB\_1798DAC, It needs to be inserted into the USB\_1798DAC motherboard,

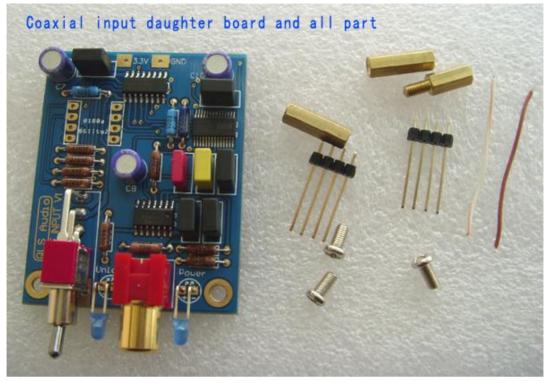


## 3.3V GND

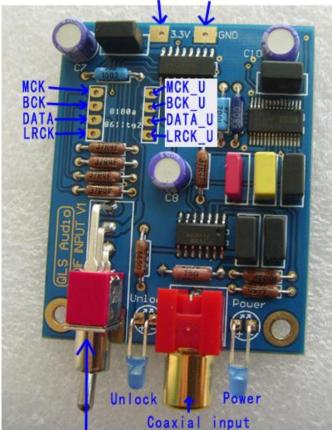


Switch Select the input for the USB or coaxial

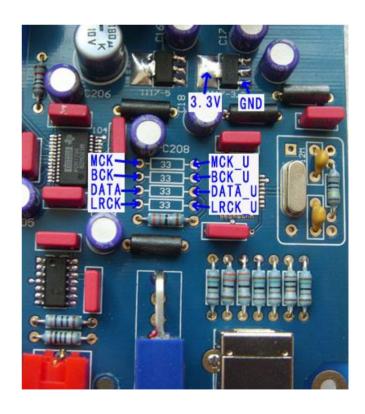

You can follow the steps below to insert daughter board to the motherboard: Step1:

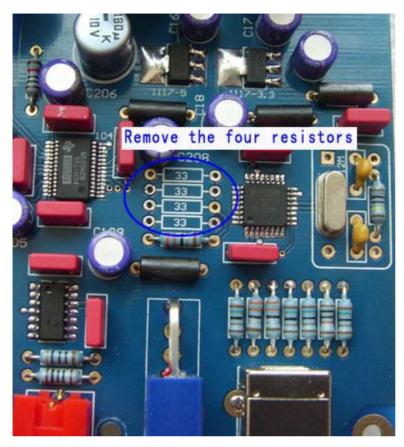


Step2:

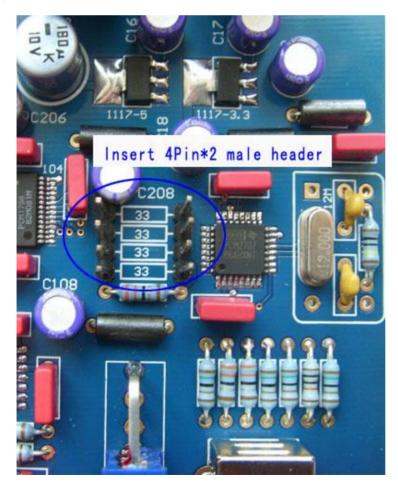

Step4:


Step3:

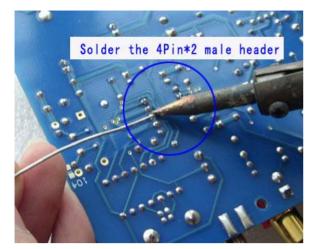


Drill a hole (you also can not need) 4. 2mm(131.496mil) R=1.5mm 43mm(1695.275mil)


Step5:

Step6:

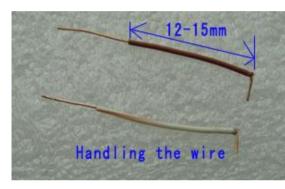

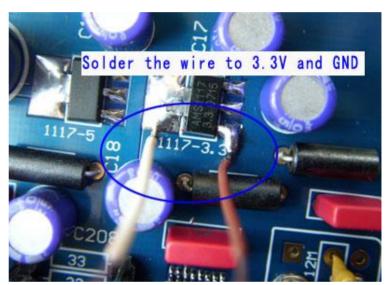


## Step7:

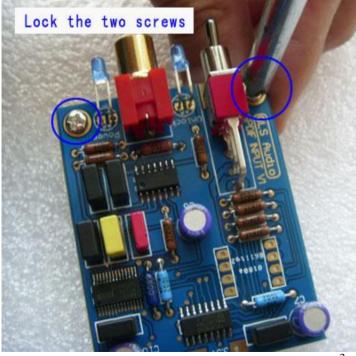


3


## Step8:

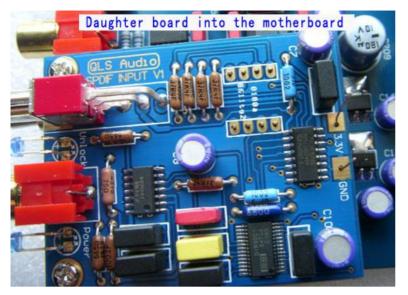

Step9:

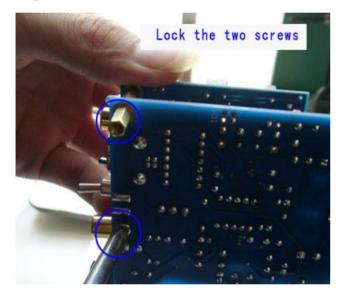

Step10:

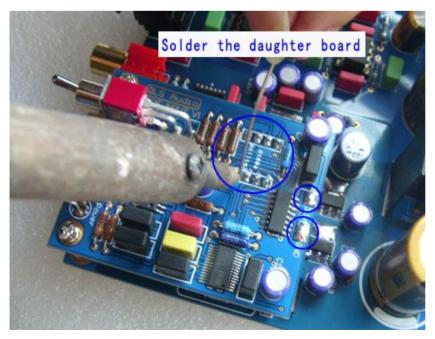

daughter board insert to the motherboard finished:

